

SYSTEM AND ITEM	INSPECTION REQUIREMENT	ROUTINE E	A	B	C CHECK X 500 HOURS											
					1	2	3	4	5	6	7	8	9	10	11	D or 12
Chapter 56 – Windows																
1. Flight Compartment																
1.a.(1) Flight Compartment - Windshield	Signs of leakage. Clean as required. (Card RA–EXT–16)	X														
1.a.(2) Flight Compartment - Windshield	Condition, crazing, and security; retaining strips for condition and security of attachment. (Card 15–03a)					X		X		X		X		X		X
1.b. Flight Compartment - Cockpit Door Window	Condition, crazing, and security; retaining strips for condition and security of attachment. For SOOs 6320 or 6321 (if installed), inspect vent for condition and security of attachment. Replace if required. (Card 15–03a, 15–03b)					X		X		X		X		X		X
2.a. Cabin, Door and Hatch Windows	Condition as required. (Card RA–EXT–17)	X														
2.b. Cabin Windows	Condition, crazing and security. Inspect vents (SOO 6368) for condition and security of attachment. Replace if required. (Card 18–14)					X		X		X		X		X		X
2.c. Cabin Door Windows	Condition, crazing and security. Inspect vents (SOO 6368) for condition and security of attachment. Replace if required. (Card 18–14)					X		X		X		X		X		X
2.d. Cabin Side Escape Hatch Windows	Condition, crazing and security. (Card 18–14)					X		X		X		X		X		X

PART 1 BASIC INSPECTION - 56

This Page Intentionally Left Blank