

PART 2 – TABLE OF CONTENTS

<u>SUBJECT</u>	<u>PAGE</u>
Part 2 – Ground Support Equipment	5
Chapter 7 – Lifting and Shoring	7
1. Conditions for Storage of Slings and Lifting Devices.....	7
2. Inspection of Slings and Lifting Devices	7
Chapter 9 – Towing and Taxiing	12
Chapter 10 – Parking and Mooring	14
Chapter 12 – Servicing	20
Chapter 22 – Auto Flight	24
Chapter 23 – Communications	26
Chapter 27 – Flight Controls	28
Chapter 31 – Instruments	30
Chapter 32 – Landing Gear	33
Chapter 45 – Central Maintenance System	35
Chapter 51 - Structures – Chapters 52 - 57	37
Chapter 61 – Propellers	40
Chapter 71 – Power Plant	43
Chapter 72 – Engine	45
Chapter 76 – Engine Controls	48
Chapter 77 – Engine Indicating	50
Chapter 79 – Oil	52

<u>LIST OF TABLES</u>	<u>PAGE</u>
1 Recommended Sling/Lifting Device Inspections	8

<u>LIST OF FIGURES</u>	<u>PAGE</u>
1 Ground Support Equipment – Lifting and Shoring	10
2 Ground Support Equipment – Towing and Taxiing	13
3 Ground Support Equipment – Parking and Mooring	16
4 Ground Support Equipment – Servicing	23
5 Ground Support Equipment – Auto Flight	25
6 Ground Support Equipment – Communications	27
7 Ground Support Equipment – Flight Controls	29
8 Ground Support Equipment – Instruments	31
9 Ground Support Equipment – Landing Gear	34
10 Ground Equipment – Laptop & Accessories Kit	36

<u>LIST OF FIGURES</u>	<u>PAGE</u>
11 Ground Support Equipment – Structures	38
12 Ground Support Equipment – Propellers	41
13 Ground Support Equipment – Power Plant.....	44
14 Ground Support Equipment – Engine.....	46
15 Ground Support Equipment – Engine Controls	49
16 Ground Support Equipment – Engine Indicating.....	51
17 Ground Support Equipment – Oil.....	53