



Chapter 51 - Structures – Chapters 52 - 57

ITEM NO.	DESCRIPTION	FUNCTION	IDENTIFICATION
1	Wing sling	Used to hoist complete wing	SD12505–1
1A	Wing sling	Used to hoist complete wing	SD12505–3 (Alternate to Item 1)
2	Vertical stabilizer sling	Used to hoist complete vertical stabilizer	SD12507–3
3	Horizontal stabilizer and elevator sling	Used to hoist horizontal stabilizer and elevator	SD12508–1
3A	Horizontal stabilizer and elevator sling	Used to hoist horizontal stabilizer and elevator	SD12508–3 (Alternate to Item 3)
4	Rudder sling	Used to hoist complete rudder	SD12517–1
5	Engine sling	Used to hoist wing complete with engine	C6GT1018–1
6	Acorn, wing to fuselage (front)	Used to align and enter front pickup bolt during installation of wing	SD12514–1
7	Acorn, wing to fuselage (rear)	Used to align and enter rear pickup bolt during installation of wing	SD12515–1
8	Filler strip installation tool (A – A)	Used when installing emergency roof hatch	SD12562–1
9	LH aft cargo door stay	Used to restrain the LH aft cargo door in the open position during loading	C6GT1103–1

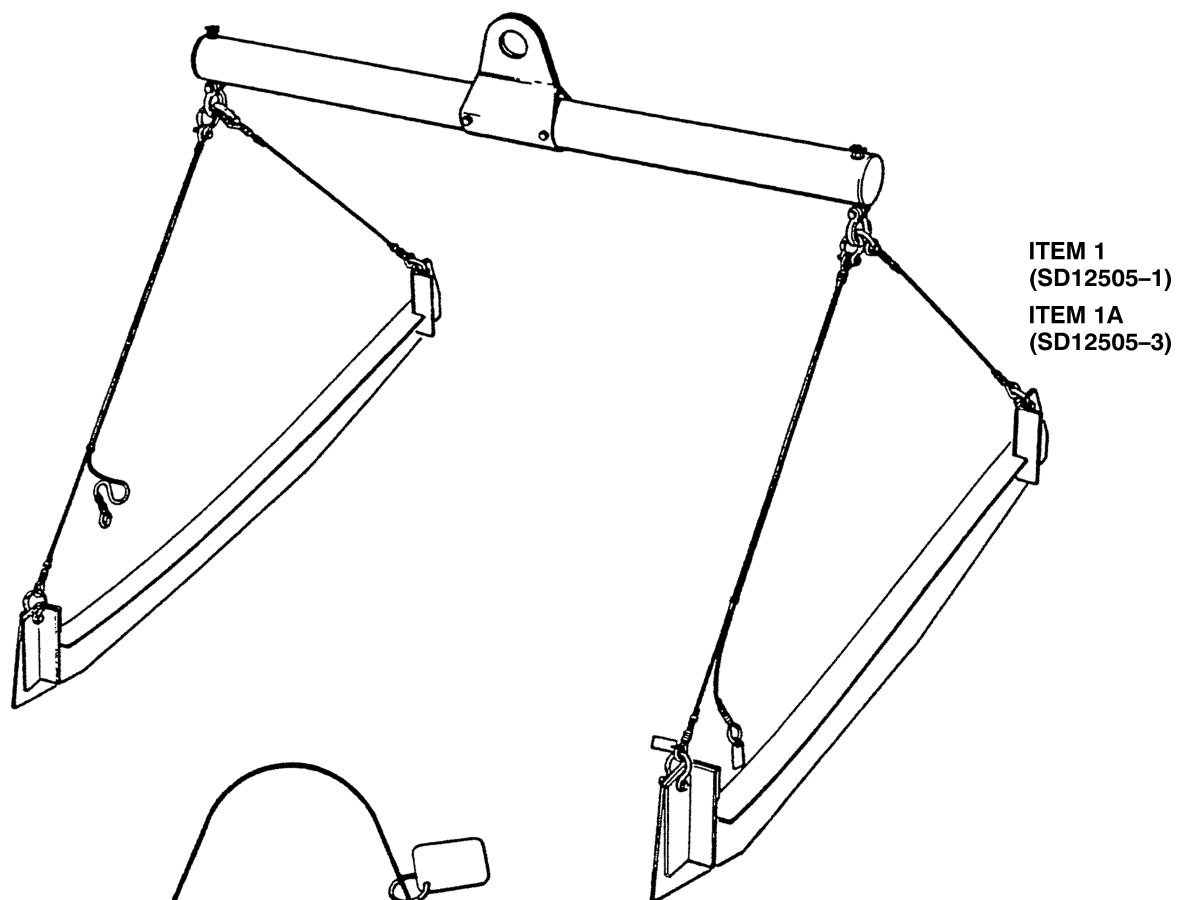


ITEM 1
(SD12505-1)

ITEM 1A
(SD12505-3)

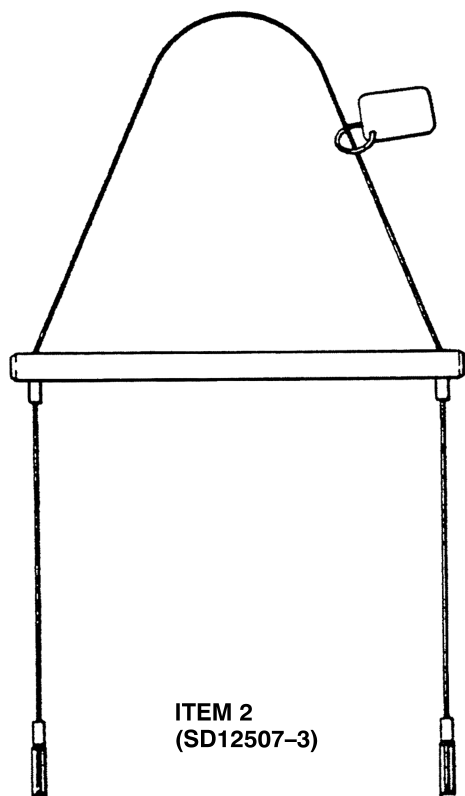


ITEM 2
(SD12507-3)

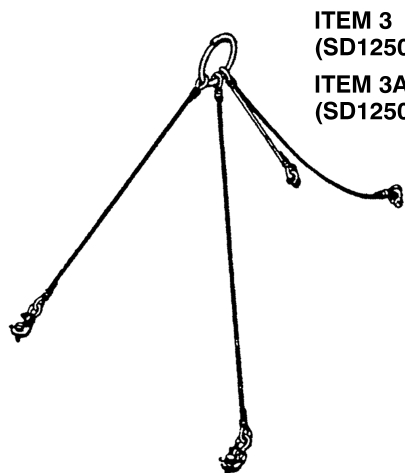

ITEM 3
(SD12508-1)

ITEM 3A
(SD12508-3)

Ground Support Equipment – Structures
Figure 11 (Sheet 1 of 2)

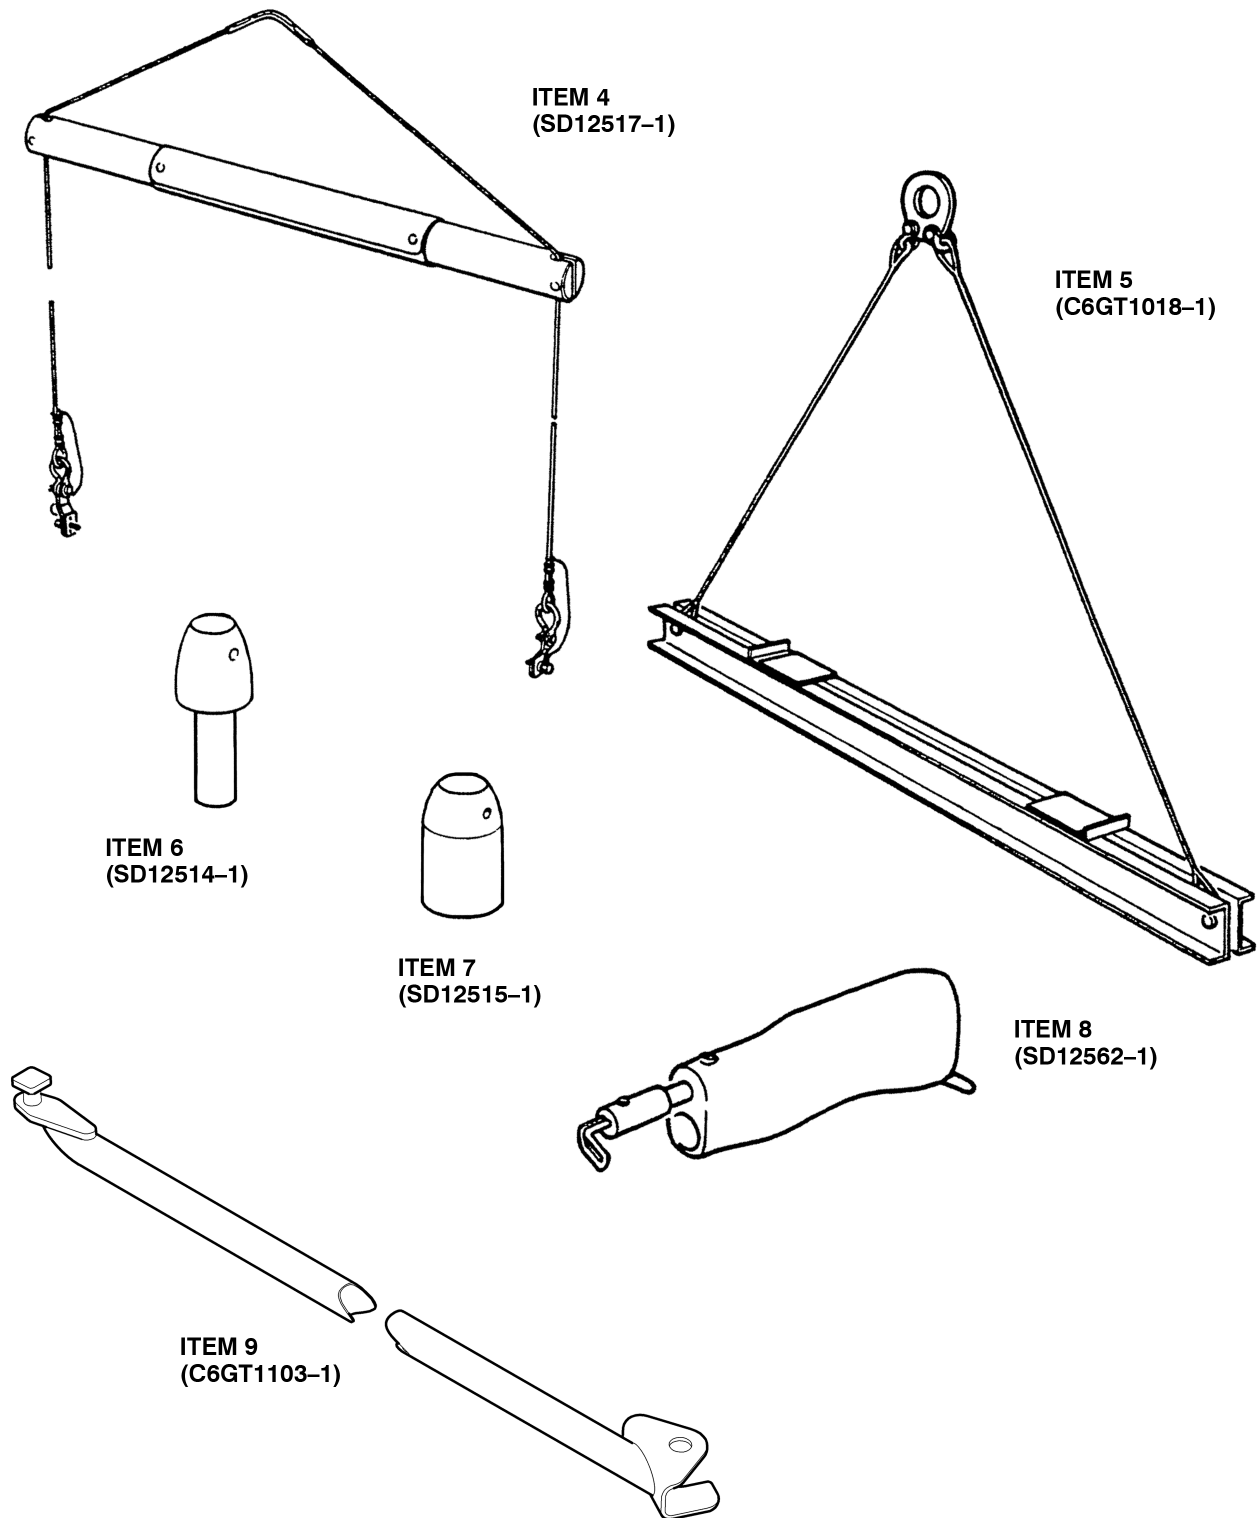

Ground Support Equipment – Structures
Figure 11 (Sheet 2 of 2)