



Chapter 61 – Propellers


ITEM NO.	DESCRIPTION	FUNCTION	IDENTIFICATION
1	Propeller sling	Used to hoist propeller	SD5534–1
2	Retraction clamp	Used to pull rod stops and collar forward allowing access to propeller retaining bolts; also used when rigging propeller (used with item 3)	SD12559–1
3	Wrench, torque adapter	Used on propeller retaining bolts during propeller removal and installation; used in conjunction with retraction clamp SD12559–1 (if retraction clamp not used, see item 4) used with 9/16" head bolt (P/N A-2047 Ref)	SD12540–1
3A	Wrench, torque adapter	Used on propeller retaining bolts during propeller removal and installation; used in conjunction with retraction clamp SD12559–1 (if retraction clamp not used, see item 4) used with 5/8" head bolt (P/N B-3339 Ref)	SD12540–3
4	Wrench, torque adapter	Used during removal and installation of propeller if retraction clamp (item 2) is not available	SD125413–3
5	Wrench, torque adapter	Used on flexlock nut ahead of propeller hub, during removal and installation of propeller	SD12549–1
6	Wrench	Used to hold clamp bolts when torquing nuts during assembly of blades from shipping crate	SD12579–1

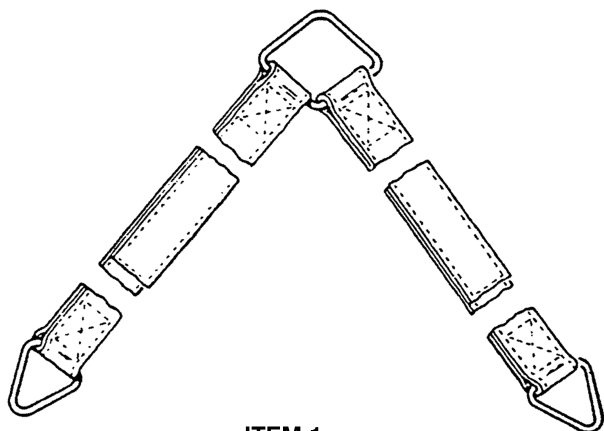


ITEM 1
(SD5534-1)

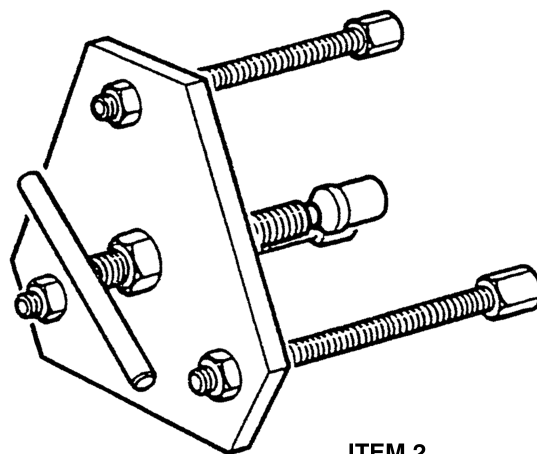

ITEM 2
(SD12559-1)

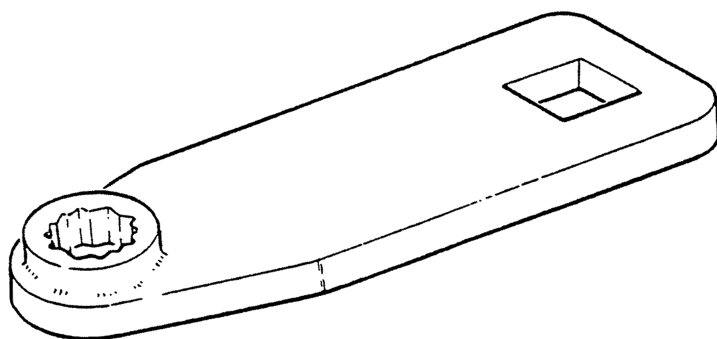


ITEM 3
(SD12540-1)
ITEM 3A
(SD12540-3)

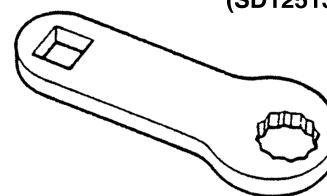


ITEM 4
(SD12513-3)

Ground Support Equipment – Propellers
Figure 12 (Sheet 1 of 2)

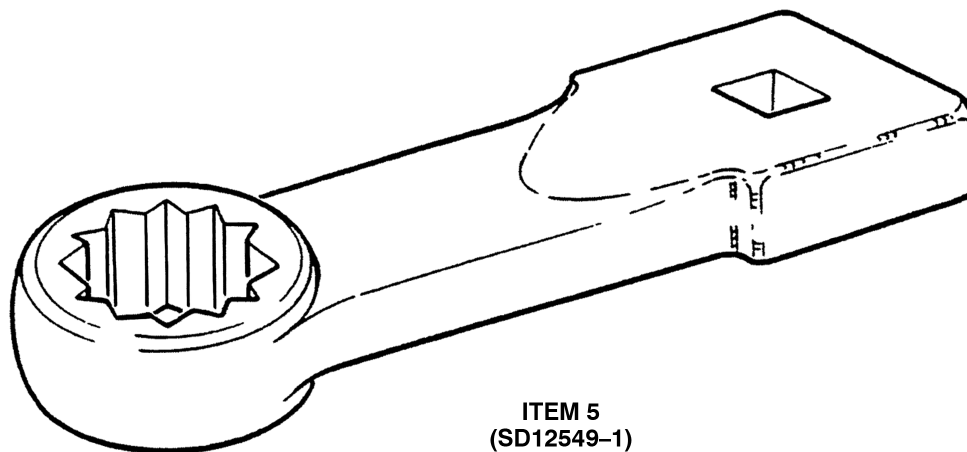

ITEM 5
(SD12549-1)

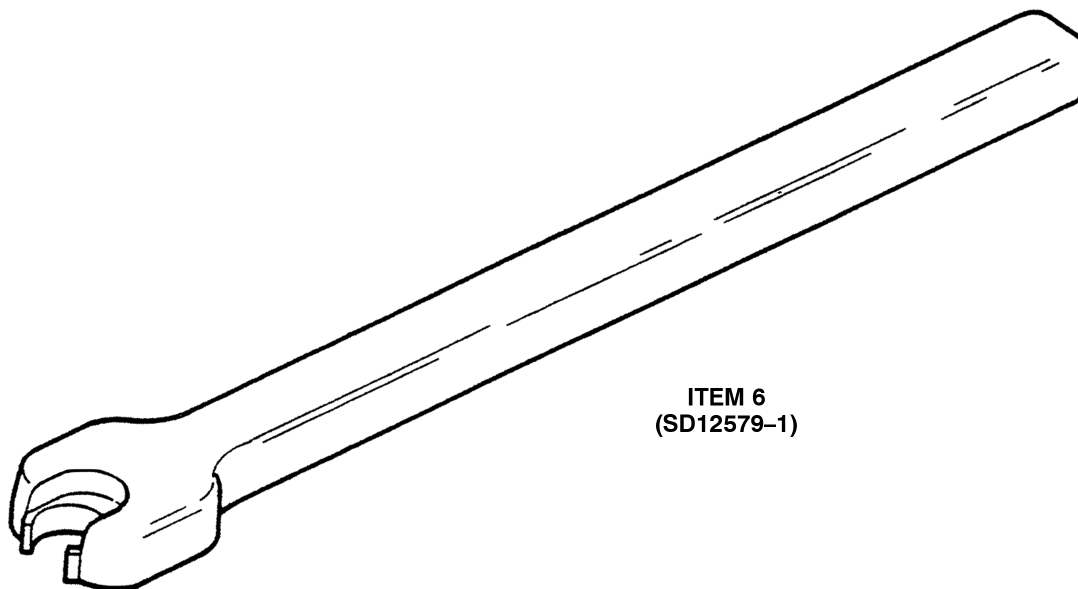

ITEM 6
(SD12579-1)

Ground Support Equipment – Propellers
Figure 12 (Sheet 2 of 2)