


Chapter 77 – Engine Indicating

ITEM NO.	DESCRIPTION	FUNCTION	IDENTIFICATION
1	Wrench (A-H)	To adjust torque pressure transmitter	SD12563–1
-2	Potentiometer	To produce voltage simulating thermocouples output	Type P4/E (Cropico)
-3	Portable resistance bridge	To provide a precision check of resistance in thermocouple harness	Type PW3/EM (Cropio)
-4	Pressure tester	Used to test torque pressure indicator and transmitter calibration	Model No. 2311F (Barfield)
-5	Test gauge	For use with item 4	0 – 160 psi (Inspector type)
-6	Hose assembly	For use with item 4	601000–4–0240 (Aeroquip)
-7	Nipple	For use with item 4 and 6	AN816–4
-8	Union	For use with item 4 and 6	AN815–4
-9	O-ring	For use with item 4 and 6	NAS617–4

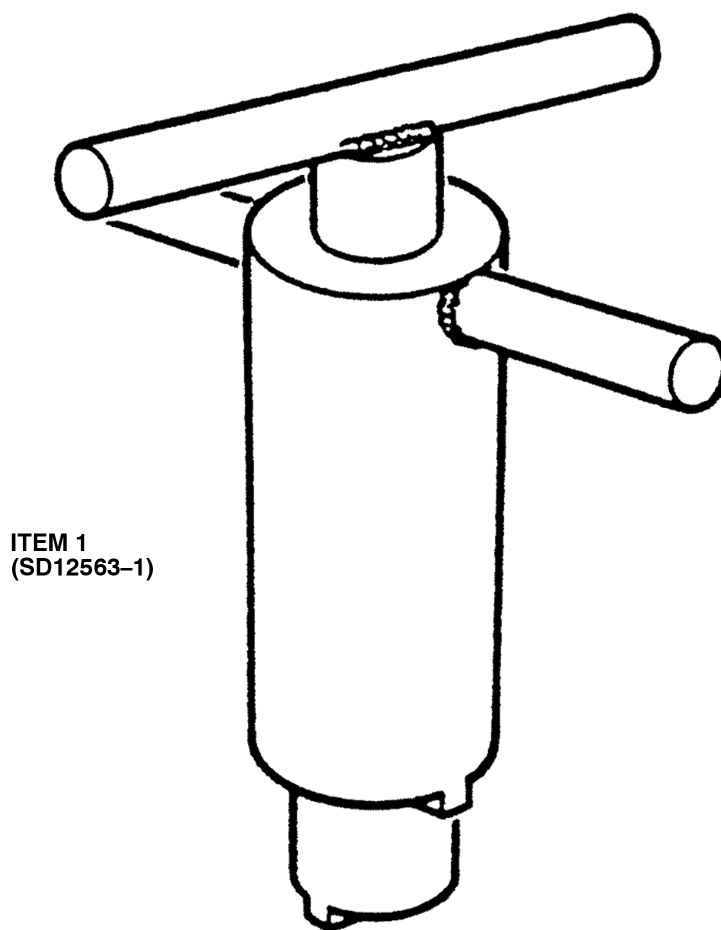

Ground Support Equipment – Engine Indicating
Figure 16