


Chapter 9 – Towing and Taxiing

ITEM NO.	DESCRIPTION	FUNCTION	IDENTIFICATION
1	Towbar, floatplane	Used to tow aircraft when beaching gear is fitted	SD5562-1
2	Towbar, wheels or skis	Used to tow aircraft fitted with wheels or skis	SD12502-7
-2A	Towbar, wheels or skis	Used to tow aircraft fitted with wheels or skis	01-1128-0008 (Alternate to item 2) (Tronair Ground Support Equipment)
3	Towbar	Used to tow aircraft with intermediate flotation gear	SD12502-9
4	Beaching gear	Fitted to forward right and left sides of floats when beaching aircraft	C6GT1016-3-LH C6GT1016-4-RH
5	Beaching gear, tail	Fitted to rear end of floats when beaching aircraft	C6GT1017-5
6	Towbar, portable	A collapsible bar to facilitate towing long or short nose aircraft with standard landing gear	C6GT1032-1
6A	Towbar, collapsible	A collapsible bar to facilitate towing long or short nose aircraft with standard landing gear	C6T1106-1 (Alternate to item 6)
6B	Shear bolt	Protective device to be used with C6GT1106-1	AN4DD21
-7	Bilge pump	For emptying water from floats – (replaces item -7)	C6UF1087-1
-7B	Bilge pump	For emptying water from floats – (replaces item -7 and -7A)	C6UF1092-1
8	Towbar (A-L)	Used to tow aircraft fitted with extended electronic nose	SD12502-13 (Has longer frame than items 2 & 3)
-8A	Towbar (A-L)	Used to tow aircraft fitted with extended electronic nose (can be broken down into two sections)	1200SP-513 (alternate to item 8) (Danair Ground Support Equipment)
-8B	Towbar	Used to tow aircraft fitted with 360° Chin Randome	01-1128-00SP-1 (one-piece towbar) 01-1128-00SP-2 (Has central joint to allow shipment with aircraft)

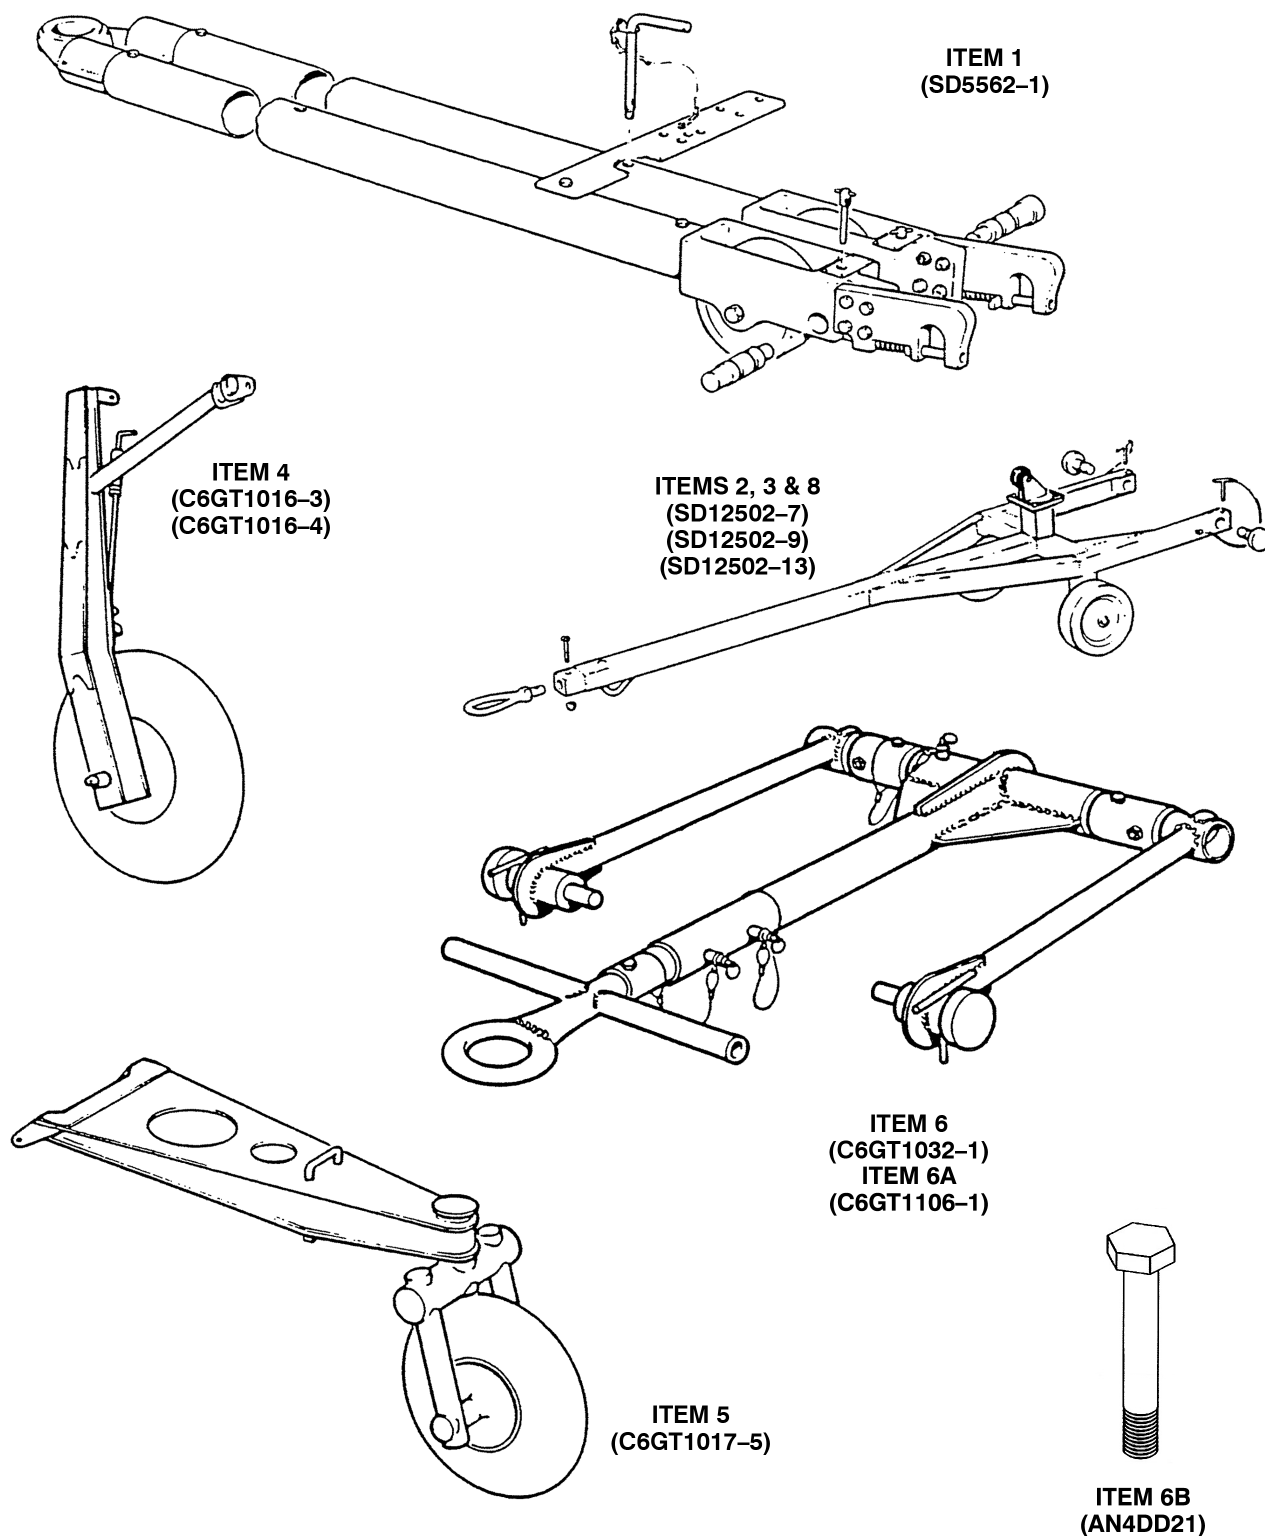

Ground Support Equipment – Towing and Taxiing
Figure 2