

TABLE OF CONTENTS

	Title Page	i
	Table of Contents	ii
	Manual Control (Record of Revisions)	iv
	Index of Temporary Revisions	v
	Log of Effective Pages	vii
Section	Description	Page
1	Introduction	1-1
	1.1 Inspections/Tests	1-1
	1.2 Maintenance	1-1
	1.3 Reference Documents	1-2
2	Scope of Inspection	2-1
	2.1 Program responsibility and review	2-1
	2.2 Maintenance and Servicing	2-1
	2.3 Airworthiness limitations (Life Limits)	2-1
	2.4 Overhaul Time Limits	2-1
	2.5 Inspection Types	2-1
	2.5.1 Basic Inspections	
	2.5.2 Special Conditional Inspections	
	2.5.3 Structural Components Service Life Limits	
	2.5.4 Corrosion Prevention and Control	
	2.6 Lubrication	2-2
	2.7 Unscheduled and Conditional Inspections/Maintenance	2-2
	2.8 FAA Airworthiness Directives and Mandatory Bulletins	2-2
	2.9 Instructions for Continued airworthiness (ICA) of Items Installed under Form 337	2-2
	2.10 Contract Maintenance	2-2
	2.11 Manual Revisions	2-2
	2.12 Abbreviations	2-3
	2.13 Definitions	2-4
3	Implementation of Program	3-1
	3.1 Aircraft Eligible for Continuous Airworthiness Maintenance Program	3-1
	3.2 Procedure for Entering Program	3-1
	3.3 Procedure for Leaving Program	3-1
	3.4 Procedure for Installation of Replacement Parts	3-1
	3.5 Procedure for Newly Installed Kits (Accessories) Not Covered by this CAMP	3-1
4	Program Operation	4-1
	4.1 Performance Instructions	4-1
	4.2 Inspection Due Times	4-1
	4.2.1 Inspection Tolerance	4-1
	4.3 Schedule of Inspections	4-2
	4.3.1 Basic Inspections	4-2
	4.3.2 Powerplant Inspections	4-2