

TABLE OF CONTENTS

<u>SUBJECT</u>	<u>CHAPTER SECTION SUBJECT</u>	<u>PAGE</u>
<u>ENGINE–DESCRIPTION AND OPERATION</u>	<u>72–00–00</u>	
General		1
Components		1
Compressor		1
Combustion Section		1
Turbine		1
Power and Accessory Gearbox		1
Systems		1
Fuel System		1
Lubrication System		22
Ignition System		22
Temperature Measurement System		22
Anti-Icing System		22
Compressor Bleed Air System		34
Water–Alcohol System		34
Specifications		38
Engine Ratings		38
Fuel Specification		38
Oil Specification		45
Operating Precautions		49
Operating Limits		49
Engine Speed		49
Engine Temperature		53
Engine Torque		53
Oil Pressure and Temperature		59
Pressure Altitude And Ambient Temperature		59
Operating Procedures (250–C20, –C20B, –C20F, –C20J,–C20W)		59
Preflight Inspections		62
Engine Starting Procedures		62
Starting Modes		62
Power Range		66
Takeoff With Water–Alcohol Augmentation		66
Operating Procedure When Using Water–Alcohol Augmentation		66
Practice Autorotation Descent and Landing		66
Air Restart		67
Anti-icing Air		68

72–CONTENTS

TABLE OF CONTENTS (cont)

<u>SUBJECT</u>	CHAPTER SECTION <u>SUBJECT</u>	<u>PAGE</u>
<u>ENGINE–DESCRIPTION AND OPERATION (cont)</u>	72–00–00	
Operating Procedures (cont)		
Engine Stopping		68
Alternate Shutdown		68
Emergency		69
Postflight Inspection		69
Operating Procedures (250–C20S)		69
Preflight Inspections		69
Ground Starting		70
Inflight Starting		73
Taxi Operation		73
Takeoff		73
Takeoff with Water Alcohol Augmentation		73
Flight Operation		74
Landing		74
Ground Shutdown		74
Normal Inflight Shutdown		75
Emergency Inflight Shutdown		75
Feathering		75
Anti-icing Air		75
Emergency		75
Cold Weather Fuels		75
Mixing Alternate Cold Weather Fuel		76
Cold Weather Oils		77
Time Between Overhauls		77
Engine TBO		78
Modular TBO		78
On–Condition Parts		78
Life Limited Parts		81
Log Book Entries		81
<u>ENGINE–TROUBLESHOOTING</u>	72–00–00	
Troubleshooting		101
<u>ENGINE–SERVICING</u>	72–00–00	
General		301
Special Service Tools		302
Consumable Materials		307

72–CONTENTS

TABLE OF CONTENTS (cont)

<u>SUBJECT</u>	CHAPTER SECTION <u>SUBJECT</u>	<u>PAGE</u>
<u>ENGINE–SERVICING (cont)</u>	72–00–00	
Hardware		321
Torques		321
Universal Fittings		322
Fittings With Backup Rings		322
Fittings Without Backup Rings		322
Locknut Installation		322
Airframe/Engine Interface Connections		322
Rigid Tube Inspection and Installation		323
Inspection		323
Flared Tubes		328
Flanged Tubes		329
Lubricants		330
Lubrication System Servicing		331
General		331
Oil Temperature Limit Exceeded		331
Oil Change		333
Low Oil Pressure Operation		334
Engine Operated With No Oil Pressure		335
Checking for Carbon Buildup		335
Magnetic Plug Inspection		335
Emergency Oil Mix		339
Cleaning		341
System On–condition Maintenance		341
Preservation and Depreservation		342
Inactive Engine Preservation		342
Oil System Preservation		342
Fuel System Preservation		343
Compressor Preservation		343
<u>ENGINE–ADJUSTMENT/TEST</u>	72–00–00	
Check Run		501
Operating Instructions		501
Diffuser Vent Orifice Selection		501
Check Run Schedule		502
Propeller Check Run (250–C20S)		503

72–CONTENTS

TABLE OF CONTENTS (cont)

<u>SUBJECT</u>	CHAPTER SECTION <u>SUBJECT</u>	<u>PAGE</u>
<u>ENGINE–ADJUSTMENT/TEST (cont)</u>	72–00–00	
Vibration Test Procedure		503
Description of Vibration Test Procedure		503
Glossary of Terms		505
Equipment Requirements		505
Test Procedure		506
Interpretation of Data		511
Limits		516
Maintenance Action		516
Manufacturer Assistance		519
Engine Trend Check Analysis		519
Engine Trend Check Procedure		520
Description		520
Example		523
Procedure		528
Aircraft Manufacturer Trend Check – Alternate Procedure		534
<u>ENGINE–INSPECTION/CHECK</u>	72–00–00	
Inspections		601
Preflight and Postflight Inspections		601
Scheduled Inspections		605
Alternate Inspection Scheduled		613
Special Inspections		620
<u>ENGINE–CLEANING/PAINTING</u>	72–00–00	
General		701
Cleaning		701
Corrosion Treatment and Surface Finish Repair		701
Galvanic Corrosion Protection		702
Fire Extinguisher Material (Cleaning)		702
<u>ENGINE–STORAGE INSTRUCTIONS</u>	72–00–00	
General		901
Preservation		901
Preparation of the Engine for Shipment		901
Installation of Engine in Container		901
Removal of Engine from Container		908
Container Reuse		910
Preservation Surveillance		910

72–CONTENTS

TABLE OF CONTENTS (cont)

<u>SUBJECT</u>	<u>CHAPTER SECTION SUBJECT</u>	<u>PAGE</u>
<u>COMPRESSOR SECTION – MAINTENANCE PRACTICES</u>	<u>72–30–00</u>	
Compressor Assembly Replacement		201
Removal		201
Removing the Spur Adapter Gearshaft		206
Installation		206
Determining Compressor Mounting Shim Thickness Requirements		209
Compressor Case Replacement		211
Removal (Compressor Case Top Half)		211
Installation (Compressor Case Top Half)		211
Removal (Compressor Case Bottom Half)		214
Installation (Compressor Case Bottom Half)		214
Compressor Front Bearing and/or Oil Seal Replacement (Engine Removed)		215
Removal		215
Installation		216
Compressor Front Bearing and/or Oil Seal Replacement (Engine Installed)		220
Replacement Procedure		220
Inspection/Check		221
Diffuser Vent Orifice Inspection		221
Blade and Vane Inspection		221
Blade Damage		221
Vane Damage		225
Compressor Case Plastic Coating Inspection		226
Sealing Compressor Case Plastic Coating Cracks		227
Compressor Front Support Inspection		230
Compressor Cleaning		231
Water Rinse		231
Cleaning Compressor Blading		233
Cleaning Water–Alcohol Residue from Engine		235
Preservation		236
<u>COMBUSTION SECTION–MAINTENANCE PRACTICES</u>	<u>72–40–00</u>	
Combustion Liner		201
Removal		201
Installation		201
Inspection and Repair		202
Outer Combustion Case		207
Removal/Installation		207
Inspection and Repair		207

72–CONTENTS

TABLE OF CONTENTS (cont)

<u>SUBJECT</u>	CHAPTER SECTION <u>SUBJECT</u>	<u>PAGE</u>
<u>COMBUSTION SECTION-MAINTENANCE PRACTICES (cont)</u>	72-40-00	
Burner Drain Valve		211
Removal/Cleaning/Installation/Check		211
Compressor Discharge Air Tubes		213
Inspection and Repair		213
<u>TURBINE SECTION-MAINTENANCE PRACTICES</u>	72-50-00	
Turbine Assembly		201
Removal (M250-C20, -C20B, -C20F, -C20J)		201
Installation (M250-C20, -C20B, -C20F, -C20J)		203
Removal (M250-C20S, -C20W)		204A
Installation (M250-C20S, -C20W)		204B
First-stage Turbine Nozzle and First-stage Turbine Nozzle Shield		206
Removal		206
Installation		211
Fire Shield		214
Removal (M250-C20, -C20B, -C20F, -C20J)		214
Installation (M250-C20, -C20B, -C20F, -C20J)		215
Removal (M250-C20S, -C20W)		216
Installation (M250-C20S, -C20W)		216
Fire Shield Access Panel (M250-C20S, -C20W)		217
Removal		217
Installation		217
E-ring Gasket Installation Leak Check		218
Equipment		218
Procedures		218
Oil Bellows Seal		218
Removal		218
Installation		221
Inspection/Check		222
Blade and Vane Inspection		222
Power Turbine Outer Shaft Spline Inspection		222A
Horizontal and Vertical Firewall Shields Inspection		222A
First-stage Turbine Nozzle and Nozzle Shield Inspection		223
Oil Flow Measurement		223
Inspection and Cleaning of Power Turbine Support Scavenge Oil Strut		224
Oil System Maintenance		230
Cleaning Power Turbine Support Pressure Oil Nozzle		232

72-CONTENTS

TABLE OF CONTENTS (cont)

<u>SUBJECT</u>	CHAPTER SECTION <u>SUBJECT</u>	<u>PAGE</u>
<u>TURBINE SECTION-MAINTENANCE PRACTICES (cont)</u>	72-50-00	
Replacing Gas Producer Support Pressure Oil Tube (Manifold)		
No. 8 Bearing Cavity Exposed		234
Replacing Gas Producer Turbine Support Pressure Oil Tube (Manifold)		
No. 8 Bearing Cavity Not Exposed		238
Cleaning Power Turbine Labyrinth Seals		240
Turbine Pressure Oil System Check Valve		240
Approved Repairs		241
Turbine and Exhaust Collector Support Crack Repair		241
<u>POWER AND ACCESSORY GEARBOX - MAINTENANCE PRACTICES</u>	72-60-00	
Replacement		201
Power and Accessory Gearbox Replacement		201
Oil Seals Replacement		202
Oil Filter Replacement		202
Lube Oil Filter Housing Replacement		208
Gearbox Disassembly and Assembly		209
Gearbox Disassembly		209
Gearbox Cover Disassembly		209
Gearbox Housing Disassembly		232
Gearbox Disassembly and Assembly (cont)		
Gearbox Housing Lubrication System Components Disassembly		234
Oil Pump Disassembly, Inspection and Assembly		247
Lube Oil Filter Housing Assembly and Test		252
Gearbox Housing Assembly and Check		252
Gearbox Cover Assembly		260
Gearbox Cover-to-Housing Assembly		263
(M250-C20S) Low Pressure Scavenger Oil Check Valve		268
(M250-C20S) Test the Low Pressure Scavenge Oil Check Valve		270
Adjustment/Test		270
Oil Pressure Regulating Valve		270
Oil Pump Priming		271
Inspection/Check/Repair		271
Oil Leakage Inspection		271
Starter-generator Gearshaft Female Spline Inspection		271
Opened Gearbox Inspection		274
Insert Inspection		274

72-CONTENTS

TABLE OF CONTENTS (cont)

<u>SUBJECT</u>	CHAPTER SECTION <u>SUBJECT</u>	<u>PAGE</u>
Repair of Compressor Mounting Inserts		274
Power Train Pinion Helical Gear Spline Inspection		276
Oil Filter Inlet Tube Assembly Drop Dimension Inspection		276